

User Manual

Pressure • Temperature • Humidity • Air Velocity • Airflow • Sound level

Thermometers TN 100, 101, 102 & TN 150, 151

TN 100

CE



"Select" key-

See table

"Functions available from main screen"

-"Function" key –

1x: "Hold": measure holding

1x long: "Auto-Hold" see p.2

2x: "Min/Max": display of minimum and maximum values from channel 1 since last request.

3x: "Min/Max": display of minimum and maximum values from channel 2 since last request.

4x: Back to held measure.

_"On / off" key -

ON: Switch-on **OFF**: Switch-off

Escape: Return to previous screen

"Backlight" key -

1x - ∀ Level 1

2x - 0 - Level 2

3x - ♥ No backlight

"OK" key -

1x "To validate"

or "Delta temperature" voir P2.

Functions available from main screen				
Select probe	1x (Select) → (OK) →	Press (Select) to scroll down units.	⇒ Val	idate with OK
Automatic shut-off	2x (Select) → (OK) →	Press (Select) to scroll down minutes.	⇒ Val	idate with OK
Веер	3x (Select) — OK)——	Press Select to activate or to deactivate.	⇒ Val	idate with OK
(Class 150) Lower alarm	4x (Select) —► (OK) —►	Press Select to select number or sign (Available on channel 1 only)	⇒ Va	lidate with OK
(Class 150) Upper alarm	5x (Select) → (OK) →	Press (Select to select number or sign (Available on channel 1 only)	⇒ Va	alidate with OK
(Class 150) Auto-	1x long press (Hold)	A beep rings, once measure is stabilized (Available on channel 1 only)	\Rightarrow	Exit with Esc
(2 channels) Delta temperature	1x OK → Delta tempe	erature value : T _{channel 2} -T _{channel 1}	\Rightarrow	Exit with (Esc)

How to change battery

- 1. Remove the front part at the back of the instrument
- 2. Remove old battery
- 3. Insert the new battery in accordance with proper polarity drew inside the housing.
- 4. Replace the front.





Once returned to KIMO, required waste collection will be assured in the respect of the environment in accordance to 2002/96/CE guidelines relating to WEEE.

www.kimo.fr

