

User Manual

Pressure • Temperature • Humidity • Air Velocity • Airflow • Sound level

Thermometers

TR 100 - TR 150 TR 102 - TR 152





"Select" key

See table

"Functions available from main screen"

"Function" key ——

1x: "Hold": measure holding

1x long: "Auto-Hold" see p.2

2x: "Min/Max": display of minimum and maximum values from channel 1 since last request.

3x: "Min/Max": display of minimum and maximum values from channel 2 since last request.

4x: Back to held measure.



"On / off" key -

ON: Switch-on **OFF**: Switch-off

Escape: Return to previous screen

"Backlight" key –

1x - ♥ Level 1

2x - ፟√- Level 2

3x - ♥ No backlight

"OK" kev -

1x "To validate"

or "Delta temperature" see P2.

	Functions ava	liable from main screen	
	Select unit	1x Select → OK → Press Select to scroll down units.	⇒ Validate with OK
	Automatic shut-off	2x Select) → OK Press Select to scroll down minutes.	⇒ Validate with OK
	Веер	3x Select → OK → Press Select to activate or to deactivate.	⇒ Validate with OK
Ŋ	lass 150) Lower alarm	4x (Select) — OK) — Press (Select) to select number or sign (Available on channel 1 only)	⇒ Validate with OK
ŋ	c _{lass 1} 50) Upper alarm	5x (Select) → OK) → Press (Select) to select number or sign (Available on channel 1 only)	⇒ Validate with OK
Ŋ	Class 150) Auto- hold	1x long press (Hold) A beep rings, once measure stabilised (Available on channel 1 only)	⇒ Exit with Esc
(2	_{channels)} Delta temperature	1x OK → Delta temperature value : T _{channel 2} -T _{channel 1}	⇒ Exit with Esc

How to change battery

- 1. Remove the front part at the back of the instrument
- 2. Remove old battery
- 3. Insert the new battery in accordance with proper polarity drew inside the housing.
- 4. Replace the front.





Once returned to KIMO, required waste collection will be assured in the respect of the environment in accordance to 2002/96/CE quidelines relating to WEEE.

www.kimo.fr

