

Technical Data Sheet

Pressure • Temperature • Humidity • Air Velocity • Airflow • Sound level

CE




RTD sensor with standard connection head

TB 50 / TBD 50

- Temperature sensor with stainless steel sheath, with or without compression fitting.
- Measuring range from -80°C to +400°C (PT100 and PT1000).
 from -20°C to +120°C (NTC).
- Mounting of wires : **single pair** (2, 3 or 4 wires). **multipair** (4 or 6 wires).
- For other resistor types PT25, PT50, PT500, PT200 or NI, please contact us.

Part numbers

To order, just add the codes to complete the part number.

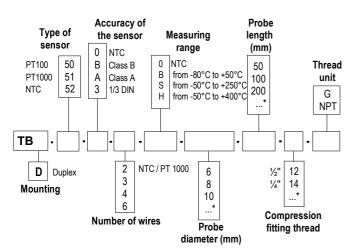


^{*} Other dimensions on request

Example: TB-50-B-3-S-6-100-12G.

Model : Temperature sensor PT 100 class B, 3 wires in a sheath of 6 mm diameter and 100 mm length, and with a $\frac{1}{2}$ " thread plug. Measuring range from -50°C to 250°C.

Dimensions

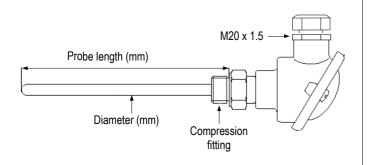

Technical features

Measuring range	from -80°C to +400°C (PT100 and PT1000) from -20°C to +120°C (NTC)
Accuracy*	PT100 or PT1000 : see "Tolerances" table NTC : see "Tolerances" table
Type of sensor	PT100 or PT1000 : Class B, Class A, 1/3 DIN as per DIN IEC751 NTC : resistance at 25°C, R_{25} = 10K Ω Nominal Beta B25/85 value = 3.695K ±1%

Mounting of wires	single pair 2, 3 or 4 wires
	For T>250°C do not use 4 wires in a
	sheath of 6 mm Ø.
	multipair 4 or 6 wires
	For T>250°C use sheath from 8 mm Ø.

Storage temperature......from -20°C to +80°C

Sheath......316 L stainless steel, 3/4 to 4/4 hard, no welding

Compression fitting......316 L stainless steel

Thread.....with or without, 1/4, 1/2, Gaz or NPT plug

(other thread on request)

Electrical connection.....with or without terminal block

transmitter 4/20mA 0/10V as option

Connection head......Aluminium alloy

cable gland: M20 x 1.5

IP65 protection


Adjustable mountings......compression fitting welded further along the

sheath, flange, clamp, repleacable probe insert, restricted end, ambient end.

See datasheet.


Useful information on thermometry with platinum resistor PT100, PT1000 or NTC.

• 2-wire connection

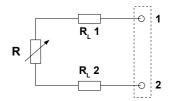


This is the simplest way, but line resistors (RL1 and RL2) are connected to the sensor in a series circuit. The addition of RL1 + RL2, leads to an off-set between measured temperature and real temperature. This connection must be avoided.

3-wire connection

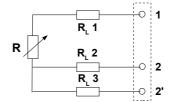

This connection involves identical line resistors (RL1-RL2-RL3), RL2 + RL3 allow you to measure the line resistance that will be substracted from the measured resistance between 1 and 22' terminals. This is the most common connection.

4-wire connection

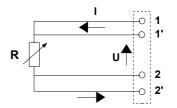

Regulated current is going through 11' and 22' terminals and the measurement is made at the sensor terminals, so none of the line resistors are taken into account. This is the most accurate connection.

Tolerance of PT100 and PT1000 probes.

Norms as per IEC 751 (1993), BS 1904 (1984) and DIN 43760 (1980).

T °C	Tolerances					
Temp °C	Class B		Class A		1/3 DIN	
	± °C	± Ohms	± °C	± Ohms	± °C	± Ohms
-100	0,8	0,32	0,35	0,14	0,27	0,11
-50	0,55	0,22	0,25	0,1	0,19	0,08
0	0,3	0,12	0,15	0,06	0,1	0,04
100	0,8	0,3	0,35	0,13	0,27	0,1
200	1,3	0,48	0,55	0,2	0,44	0,16
300	1,8	0,64	0,75	0,27	0,6	0,21
400	2,3	0,79	0,95	0,33	0,77	0,26

Resistance values for PT1000 (Ω) must be multiplied by 10 for the same corresponding temperature value (°C). I.e : at 0°C for Class B PT1000 \pm 0.3°C \rightarrow \pm 1.2 Ω

Tolerances of NTC probes

Measuring range °C	Tolerances °C		
from -20°C to 0°C	± 0.5°C		
from 0°C to +70°C	± 0.2 °C		
from +70°C to +100°C	± 0.5 °C		

Accessories (See Datasheet)

- Transmitter output 4/20 mA or 0/10V
- · Wall fixing support
- · Stainless steel mounting brackets
- $\frac{1}{4}$ " or $\frac{1}{2}$ " Gas screw nut
- · Stainless steel compression fitting
- Teflon or stainless steel ferrule for compression fittings



- Sleeve to weld for food industry
- · Stainless steel union fitting
- 1/2" Gas or NPT thread cuff
- · Thermo-conducting silicone grease
- Calibration certificate
- Thermowell



www.kimo.fr

Distributed by :

EXPORT DEPARTMENT Tel: + 33. 1. 60. 06. 69. 25 -

Tel: + 33. 1. 60. 06. 69. 25 - Fax: + 33. 1. 60. 06. 69. 29 e-mail: export@kimo.fr

